



# SD2DUG24

## Dupline generator software manual

rev. 0.5, 02 August 2023

# 1 INDEX

<b>1</b>	<b>INDEX .....</b>	<b>2</b>
<b>2</b>	<b>INTRODUCTION .....</b>	<b>4</b>
<b>2.1</b>	<b>GENERAL DESCRIPTION .....</b>	<b>4</b>
<b>2.2</b>	<b>HARDWARE REQUIREMENTS .....</b>	<b>5</b>
2.2.1	<i>USB driver for Microsoft® Windows .....</i>	5
<b>2.3</b>	<b>INSTALLATION .....</b>	<b>5</b>
<b>3</b>	<b>USER INTERFACE .....</b>	<b>6</b>
<b>3.1</b>	<b>MAIN PAGE .....</b>	<b>6</b>
<b>3.2</b>	<b>PROCEDURES.....</b>	<b>8</b>
3.2.1	<i>Create a new configuration .....</i>	8
3.2.2	<i>Open an existing configuration.....</i>	8
3.2.3	<i>Save a configuration .....</i>	8
3.2.4	<i>Program Analink channel.....</i>	9
3.2.5	<i>Program 8-bit binary protocol .....</i>	9
3.2.6	<i>Program 8-bit binary protocol with multiplexer .....</i>	10
3.2.7	<i>Program 3 ½ digit BCD protocol.....</i>	11
3.2.8	<i>Program 3 ½ digit BCD protocol with multiplexer.....</i>	12
3.2.8.1	<i>Multiplexer settings for 3 ½ digit BCD and 8-bit binary .....</i>	13
3.2.9	<i>EM24 alarms.....</i>	13
3.2.10	<i>EM24: multiplexer (transmission of analogue data) .....</i>	14
3.2.10.1	<i>Set A5 channel as DMD synchronization or tariff management .....</i>	15
3.2.11	<i>EM24: multiplexer (transmission of counter values) .....</i>	16
3.2.11.1	<i>Set B1 channel as reset of the EM24 counter .....</i>	17
3.2.11.2	<i>Multiplexer settings for EM24 protocol .....</i>	18
3.2.12	<i>Clear output when bus is faulty.....</i>	19
3.2.12.1	<i>Set an output channel when Modbus bus is faulty .....</i>	20
3.2.13	<i>Split I/O.....</i>	21
3.2.14	<i>Double scan .....</i>	21
3.2.15	<i>Connect the PC to the SD2DUG24 .....</i>	22
3.2.16	<i>Disconnect the PC from the SD2DUG24.....</i>	23
3.2.17	<i>Send a configuration to the SD2DUG24 .....</i>	23
3.2.18	<i>Read a configuration from the SD2DUG24.....</i>	23
3.2.19	<i>Upgrade the SD2DUG24 firmware .....</i>	24
3.2.20	<i>Set the name of a configuration.....</i>	24
3.2.21	<i>Set the number of Dupline channels.....</i>	25

3.2.22	<i>Set the communication parameters</i> .....	26
3.2.23	<i>Output status</i> .....	26
3.2.24	<i>Set the password</i> .....	27
<b>4</b>	<b>FORMULAS</b> .....	<b>28</b>
<b>4.1</b>	<b>PROCEDURES</b> .....	<b>28</b>
4.1.1	<i>Link a formula to an analogue value</i> .....	28
4.1.2	<i>Formula standard</i> .....	29
4.1.3	<i>Customised formula</i> .....	30
<b>5</b>	<b>MODBUS MAP</b> .....	<b>31</b>
<b>5.1</b>	<b>PROCEDURE</b> .....	<b>32</b>
5.1.1	<i>Access to the Modbus map</i> .....	32
5.1.2	<i>Search entries in the Modbus map</i> .....	32
5.1.3	<i>Export the Modbus map</i> .....	33
5.1.4	<i>Enable Live data</i> .....	33
5.1.5	<i>Change the output channels status</i> .....	34
<b>6</b>	<b>XML DRIVER PANEL</b> .....	<b>35</b>
<b>6.1</b>	<b>THINGS TO KNOW</b> .....	<b>36</b>
<b>6.2</b>	<b>PROCEDURES</b> .....	<b>37</b>
6.2.1	<i>Publish EM24 Analog data</i> .....	37
6.2.2	<i>Publish EM24 counter variables</i> .....	38
6.2.3	<i>Publish Analog Variables</i> .....	39
6.2.4	<i>Publish Realtime word inputs / outputs</i> .....	40
6.2.5	<i>Publish Realtime bit inputs/outputs</i> .....	41
6.2.6	<i>Generating the XML driver</i> .....	42
<b>7</b>	<b>G34960005 OR G34900000 QUICK SUBSTITUTION</b> .....	<b>43</b>
<b>7.1</b>	<b>PROCEDURES</b> .....	<b>43</b>
7.1.1	<i>Substitute a G34960005</i> .....	43
7.1.2	<i>Substitute a G34900000</i> .....	44
<b>8</b>	<b>APENDIX</b> .....	<b>45</b>
<b>8.1</b>	<b>TIPS AND TRICKS</b> .....	<b>45</b>
8.1.1	<i>Select multiple channels</i> .....	45
<b>8.2</b>	<b>BSI-TEMANA CONVERSION TABLE</b> .....	<b>46</b>
<b>8.3</b>	<b>EM24 ANALOG VARIABLES TABLE</b> .....	<b>47</b>

## 2 INTRODUCTION

### 2.1 General description

Welcome to the SD2DUG Software manual. This guide will cover the essentials of setting up and using the SD2DUG software included with your Dupline® System.

This software tool has been designed for the configuration and updating of the Dupline channel generator SD2DUG24: the communication parameters and the channel programming are set-up locally in the PC, and then transferred to the generator through a USB port. Likewise, data from the generator can be uploaded and modified.

To connect the PC to the SD2DUG any Micro-USB cable can be used (standard cable to connect to Android smart-devices).



#### Important note:

Out of the factory, the SD2DUG24 has the following settings:

- It repeats the input channels onto the output ones
- The generated Dupline frame has 128 channels
- The Modbus parameters are:
  - Address = 1
  - Speed = 9600
  - Data bits = 8
  - Parity = None
  - Stop bit = 1

***Should these settings fit the ones of the system, no further configurations are needed and the SD2DUG24 can be directly powered and connected without any programming.***

## 2.2 Hardware requirements

- The program operates with Windows 7 or higher, with Microsoft .Net 4.6.2 or higher
- A free USB port
- Micro-USB cable with data transmission and recharging feature

### 2.2.1 USB driver for Microsoft® Windows

Windows Version	USB driver
10 / 8.1	The USB driver is already included
7	Download the <a href="#">USB driver for Windows 7</a>

## 2.3 Installation

Download the software file from the link:


[http://www.productselection.net/Download/UK/Setup\\_DUG\\_software.zip](http://www.productselection.net/Download/UK/Setup_DUG_software.zip)

Run the Setup DUG xxxx.exe file

# 3 USER INTERFACE

## 3.1 Main page

When the DUG software is started, the following window will open:

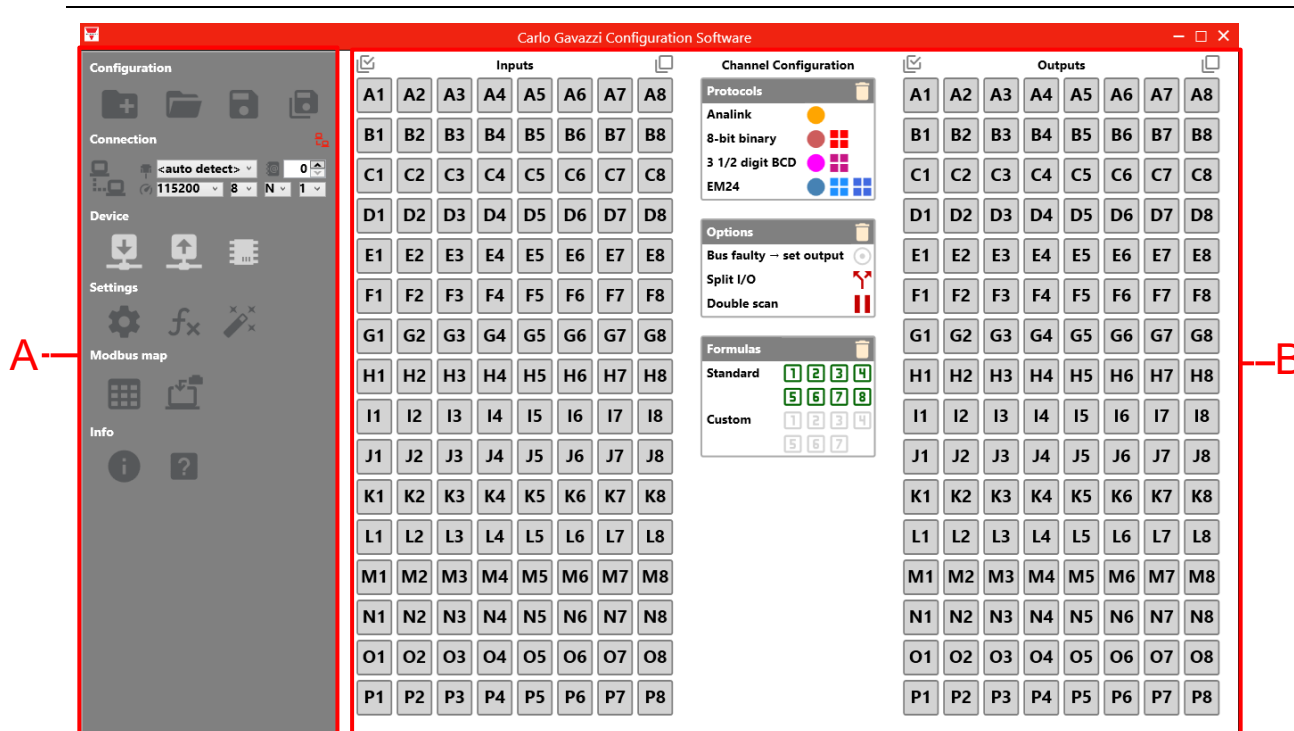



The different areas are as follows:

Area	Description
------	-------------

**A** The left panel contains:

Tab	Description
<b>Configuration</b>	To open new or already saved configuration or to save a configuration
<b>Connection</b>	To connect the PC to an SD2DUG24 module
<b>Device</b>	To read a configuration from an SD2DUG24, to write a configuration into an SD2DUG24, to update the firmware of an SD2DUG24
<b>Settings</b>	To set different parameters, to set customised formulas, to copy the setting of a G34900000 or a G34960005
<b>Modbus map</b>	To export the Modbus map, to see Live data on the Dupline bus, to export XML driver files for UWP 3.0 Tool
<b>Info</b>	To see info relevant to the software and firmware version, to open the online manual



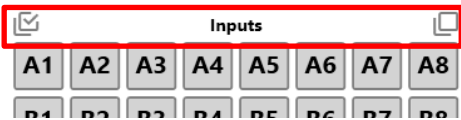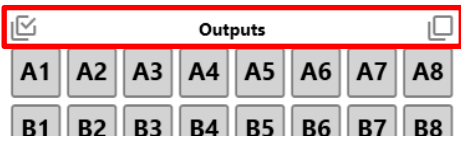

**B** The right panel contains:

Tab	Description
<b>Inputs</b>	<p>Matrix of the Dupline input channels</p> <p>Click on <input checked="" type="checkbox"/> to select all the Dupline Input channels</p> <p>Click on <input type="checkbox"/> to deselect all the Dupline Input channels</p> 
<b>Channel configuration</b>	To select the Dupline <b>protocols</b> , set the different <b>options</b> and apply <b>formulas</b>
<b>Outputs</b>	<p>Matrix of the Dupline output channels</p> <p>Click on <input checked="" type="checkbox"/> to select all the Dupline Output channels</p> <p>Click on <input type="checkbox"/> to deselect all the Dupline Output channels</p> 

## 3.2 Procedures


### 3.2.1 Create a new configuration

To create a new configuration, follow this procedure:

Step	Action
1	Click on 
2	<p>If a configuration is already open, a pop-up will appear in which is possible to choose an operation from:</p> <p>a) Save </p> <p>b) Do not save </p> <p>c) Cancel action "New configuration" </p>



### 3.2.2 Open an existing configuration

To open a configuration, follow this procedure:

Step	Action
1	Click on 
2	Select the configuration to open

### 3.2.3 Save a configuration


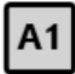


To save a configuration, follow this procedure:

Step	Action
1	Click on  (Save) or  (Save as)
2	Select the folder where the configuration has to be saved






### 3.2.4 Program Analink channel

To program one or more channels as Analink, follow this procedure:

Step	Action
1	<p>Click on the <b>channel</b> to be programmed (from A1 to P8): if one or more channels are selected, the underline is marked with a thicker line</p> <p> Not selected channel</p> <p> Selected channel</p> <p>To select more channels, <a href="#">see the detailed procedure</a></p>
2	<p>Click on the  orange circle on the right side of <b>Analink</b>: the channels will be marked in <b>orange</b></p> <p></p>

### 3.2.5 Program 8-bit binary protocol

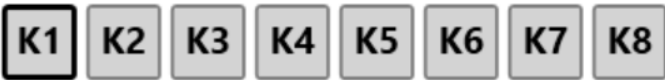To program as 8-bit binary protocol, follow this procedure:

Step	Action
1	<p>Click on <b>one</b> of the channels belonging to the group to be programmed:</p> <p></p>
2	<p>Click on the  brown circle on the right side of <b>8-bit</b>: all the 8 channels belonging to the group will be marked in brown with a thin black box around:</p> <p></p>


### 3.2.6 Program 8-bit binary protocol with multiplexer

To program as 8-bit binary protocol with multiplexer, follow this procedure:

Step	Action
------	--------


- 1 Click on **one** of the channels belonging to the group to be programmed:




- 2 Click on the  red square on the right of **8-bit binary**: the whole group will be marked in red inside a thin black frame:



The output channel from A1 to A4 will be reserved for the multiplexer:

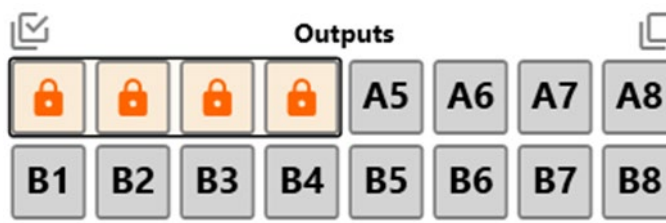

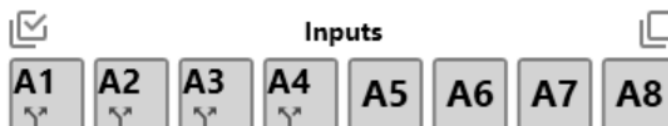


*Note: The Input channels from A1 to A4 are automatically set as split I/O.*



### 3.2.7 Program 3 ½ digit BCD protocol

To program as 3 ½ digit BCD protocol, follow this procedure:

Step	Action
1	<p>Click on <b>one</b> of the channels belonging to the first group to be programmed:</p> 
2	<p>Click on the  pink circle on the right side of <b>3 ½ digit BCD</b>: all the 16 channels belonging to the selected and following group will be marked in pink inside a thin black frame:</p> 


### 3.2.8 Program 3 ½ digit BCD protocol with multiplexer

To program as 3 ½ digit BCD protocol with multiplexer, follow this procedure:

Step	Action
------	--------


- 1 Click on **one** of the channels belonging to the first group to be programmed:




- 2 Click on the  violet square on the right side of **3 ½ digit BCD**: all the 16 channels belonging to the selected and following group will be marked in violet inside a thin black frame:



The output channels from A1 to A4 will be reserved for the multiplexer:

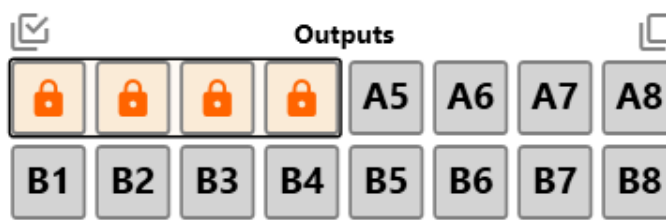



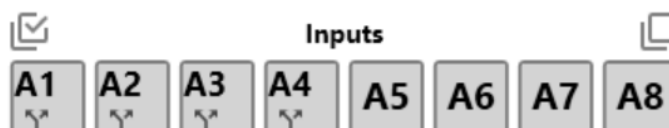


The Input channels from A1 to A4 are automatically set as split I/O.






### 3.2.8.1 Multiplexer settings for 3 ½ digit BCD and 8-bit binary

To set the multiplexer parameters, follow this procedure:

Step	Action
1	Click on 
2	To set how long the value of the multiplexer has to be maintained for, fill in field <b>Keep multiplexer value for ...</b> the value in seconds 
3	The multiplexer values have to be defined in the <b>Multiplexer values</b> field: To add a new value, click on  To switch between single value or more values, click on  To delete an existing value, click on 


### 3.2.9 EM24 alarms


To dedicate one input channel to the alarm output of the EM24, follow this procedure:

Step	Action
1	Click on the channel to be programmed as retransmission of setpoint alarms:  <i>Note: A maximum of two input channels can be programmed as alarm signals from each EM24.</i>
2	Click on the  blue circle on the right side of <b>EM24</b> : the channel will be marked in blue 

### 3.2.10 EM24: multiplexer (transmission of analogue data)

To program the channels to detect the analogue values sent by one or more EM24s, follow this procedure:

Step	Action
1	Click on <b>one</b> of the channels belonging to the first group to be programmed from G to P: 


- 2 Click on the  light-blue square on the right side of **EM24**: all the 16 channels belonging to the selected and following group will be marked in light-blue inside a thin black frame:



The Output channels from **A1 to A4** will be reserved for the multiplexer and the **A5** channel is automatically reserved as the synchronization channel:




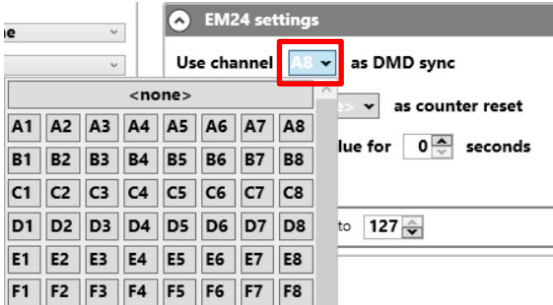
The Input channel from **A1 to A5** are automatically set as split I/O

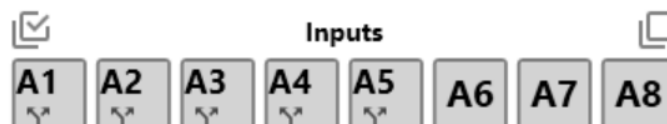

### 3.2.10.1 Set A5 channel as DMD synchronization or tariff management

The A5 output value can be set in two ways:

#### a) Copying the status of any input channel (see the procedure below):

Step	Action
1	Copying the status of any input channel <ol style="list-style-type: none"> <li>Click on </li> <li>Select the input channel from the list, as shown below:               <div data-bbox="485 701 1040 1010" style="border: 1px solid gray; padding: 5px; margin: 10px 0;">  </div> </li> </ol>

The status of this input will be reproduced on the sync channel A5.

#### b) Via Modbus (see the procedure below):

The A5 channel can be set via Modbus by sending write command to one of the following addresses:

Entry type	Function Code (Write)	Address (Dec)	Address (Hex)	Note
Coil	01, 05, 15	4	H0004	
Holding Register	06, 16	1520	H05F0	High Byte = A5 Low Byte = B1

*Note: The DMD synchronization or tariff management will be executed on the next Dupline frame after sending the Modbus command.*


### 3.2.11 EM24: multiplexer (transmission of counter values)

To program the channels to detect the counter values sent by one or more EM24s, follow this procedure:

Step	Action
------	--------


- 1 Click on **one** of the channels belonging the first group to be programmed from C to F:




- 2 Click on the  blue square on the right side of **EM24**: all the 32 channels belonging to the C, D, E and F groups will be marked in blue



The output channels from B2 to B8 will be reserved for the multiplexer and B1 channel is automatically reserved as the reset channel

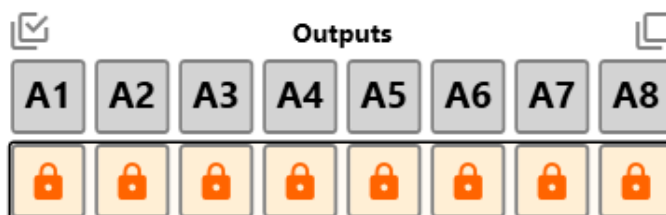

The Input channels from B1 to B8 are automatically set as split I/O.

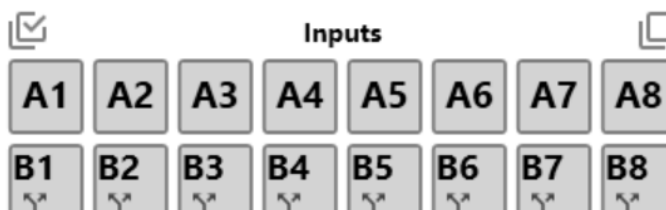




### 3.2.11.1 Set B1 channel as reset of the EM24 counter

The B1 output value can be set in two ways:


#### a) Copying with the status of any input channel (see procedure below):

Step	Action
------	--------

1 Copying with the status of any input channel:

a) Click on 

b) Select the input channel from the list, as shown below

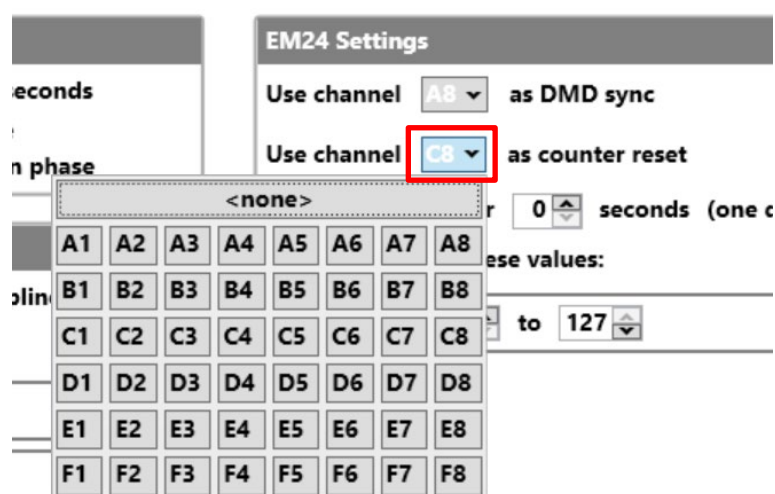

The status of this input channel will be reproduced on the reset channel B1.

#### b) Via Modbus (see procedure below):

To reset the EM24 counters via Modbus, one of the following addresses can be used:


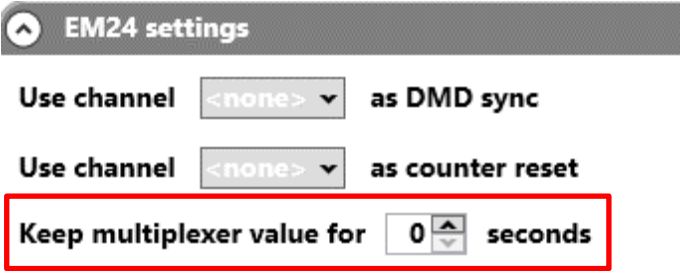



Entry type	Function Code (Write)	Address (Dec)	Address (Hex)	Note
Coil	01, 05, 15	8	H0008	
Holding Register	06, 16	1520	H05F0	High Byte = A5 Low Byte = B1

*Note: The software automatically detects how many counters are configured and the reset command will be executed for all the active(\*) counters.*

*(\*) Reset command has to be applied only for transmitted counters: if a multiplexer address is not enabled, the related counter value is not transmitted, and it will not be reset.*

### 3.2.11.2 Multiplexer settings for EM24 protocol


To set the multiplexer parameters, follow this procedure:

Step	Action
1	Click on 
2	<p>To set how long the value of the multiplexer has to be maintained for, fill in the field <b>Keep multiplexer value for ...</b> in seconds</p>  <p>The screenshot shows the 'EM24 settings' panel with three configuration options: 'Use channel &lt;none&gt; as DMD sync', 'Use channel &lt;none&gt; as counter reset', and 'Keep multiplexer value for 0 seconds'. The 'Keep multiplexer value for' field is highlighted with a red border.</p>
3	<p>The multiplexer values have to be defined in the <b>Multiplexer values</b> field:</p> <p>To add a new value, click on </p> <p>To switch between single value or more values, click on </p> <p>To delete an existing value, click on </p>

### 3.2.12 Clear output when bus is faulty


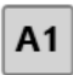



If the Modbus bus is faulty, the relevant Dupline output channels can be kept OFF until the Modbus bus will be on again.

To keep the Dupline output channels OFF when the bus is faulty, follow this procedure:

Step	Action
1	To enable this function, click on the icon 
2	Check the <input checked="" type="checkbox"/> <b>Clear output when bus is faulty for ... seconds</b>
3	Define the time period (expressed in seconds) after which the Dupline output channel has to be set OFF in the numeric field
4	Click on <input checked="" type="checkbox"/> (Save): The action will automatically be applied to all the Dupline output channels. If specific output channels must be set ON, <a href="#">see the next procedure</a>





### 3.2.12.1 Set an output channel when Modbus bus is faulty

To program an output channel so that it is set ON when the Modbus bus is faulty, follow this procedure:

Step	Action
1	<p>To enable this function, click on the icon </p> <p>Check <b>Clear output...</b></p> <p>Set after how many seconds the output has to be reset</p> <p>Click on <b>Save</b></p>
2	<p>Click on the <b>Dupline output channel</b> to be programmed (from A1 to P8): if one or more channels are selected, the underline is marked with a thicker line:</p> <p> Not selected channel</p> <p> Selected channel</p> <p>To select more channels, <a href="#">see the detailed procedure</a></p>
3	<p>Click on the  red circle on the right side of <b>Bus faulty -&gt; set output</b>: the channels will be marked with a small circle next to the channel name:</p> <p></p> <p>The status of the selected channel will be (set ON) activated each time the bus is faulty.</p>

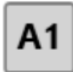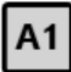



### 3.2.13 Split I/O

To program an input channel as split I/O, follow this procedure:

Step	Action
1	<p>Click on the <b>input channel</b> to be programmed (from A1 to P8): if one or more channels are selected, the underline is marked with a thicker line</p> <p> Not selected channel</p> <p> Selected channel</p> <p>To select more channels, <a href="#">see the detailed procedure</a></p>
2	<p>Click on the  red arrows on the right side of <b>Split I/O</b>:</p> <p>The channels will be marked with the same symbol below the channel name</p> <p></p>

### 3.2.14 Double scan

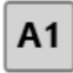To enable the double scan on one or more input channels, follow this procedure:

Step	Action
1	<p>Click on the <b>input channel</b> to be programmed (from A1 to P8): if one or more channels are selected, the underline is marked with a thicker line:</p> <p> Not selected channel</p> <p> Selected channel</p> <p>To select more channels, <a href="#">see the detailed procedure</a></p>
2	<p>Click on the  red double bar on the right side of <b>Double scan</b>:</p> <p>the channels will be marked with the same symbol next to the channel name.</p> <p></p>

### 3.2.15 Connect the PC to the SD2DUG24

To connect the PC to the SD2DUG24 generator, follow this procedure:

Step	Action
1	Connect the SD2DUG24 to your PC, using one of the following ports: <ol style="list-style-type: none"> <li>The Micro-USB port in the front part of the module – using a standard USB cable.</li> <li>The RS485 port on the bottom of the module – using an RS485 to USB converter.</li> </ol>
2	Select <b>&lt;auto detect&gt;</b> in the <b>Connection</b> menu, alternatively a <b>Com</b> port can be selected together with the connection parameters.


#### **Things to know**

- The software shows all the detected Com ports
- **<auto detect>** mode is available only when the Micro-USB port is used and the connection parameters are 115200, 8, N, 1 and they cannot be changed
- If the Micro-USB port is used, Modbus address 0 can be used as the default address
- If the RS485 port is used, the Modbus address of the SD2DUG24 has to be used together with the proper connection parameters (the default address out of the factory is 1, while the default parameters are 9600, 8, N, 1)

*Note: If the RS485 port is used, the Modbus address 0 cannot be selected*



3 Click on 

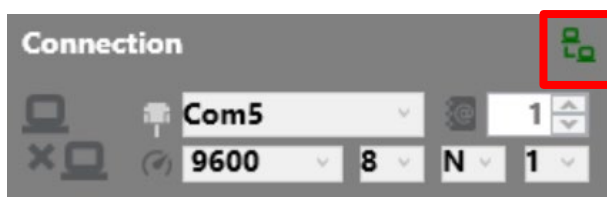4 The Dupline generator will connect to the PC and a green icon will be shown:




### 3.2.16 Disconnect the PC from the SD2DUG24

To disconnect the PC from the SD2DUG24, follow this procedure:

Step	Action
1	Click on 
2	The Dupline generator will disconnect from the PC and a red icon will be shown: 


### 3.2.17 Send a configuration to the SD2DUG24

To send a configuration to the SD2DUG24 generator, follow this procedure:

Step	Action
1	Connect the SD2DUG24 to your PC
2	Click on 


### 3.2.18 Read a configuration from the SD2DUG24


To read a configuration from the SD2DUG24 generator, follow this procedure:

Step	Action
1	Connect the SD2DUG24 to your PC
2	Click on 

### 3.2.19 Upgrade the SD2DUG24 firmware

To upgrade the firmware of the SD2DUG24 generator, follow this procedure:

Step	Action
1	Connect the SD2DUG24 to your PC
2	Click on 
3	The following blue window will appear, showing the status of the update:

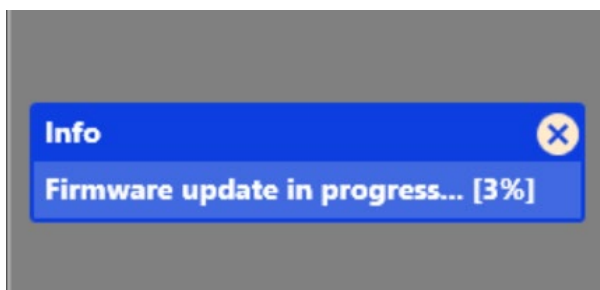


#### **Things to know**


While a firmware upgrade is in progress, no other operation can be carried out

### 3.2.20 Set the name of a configuration

To set the name, follow this procedure:

Step	Action
1	Click on 

2 Type-in the name:



Click on  (Save)




### 3.2.21 Set the number of Dupline channels

To set this number, follow this procedure:

Step	Action
------	--------


1 Click on 


2 Select the number required in the **Active channels** field:

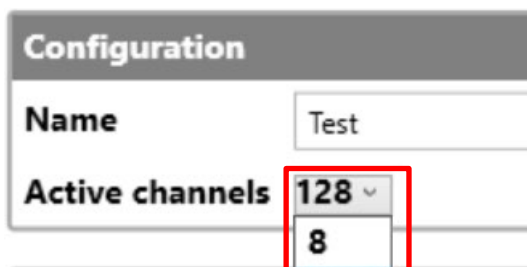

**Things to know**

By hovering over the channel field, the pop-up shows how many Active Channels the current configuration requires.

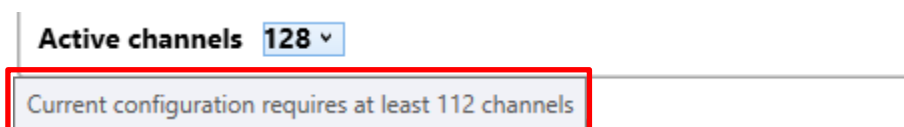

3 Click on  (Save)


### 3.2.22 Set the communication parameters

To set the communication parameters of the **RS485 port**, follow this procedure:

Step	Action
------	--------

1 Click on 

2 Select the proper setting in **Modbus**:

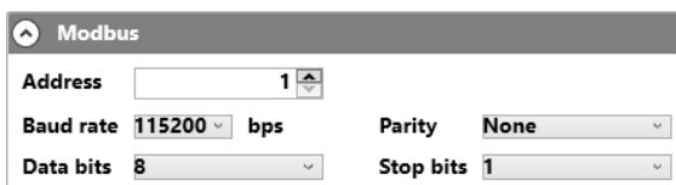

Click on  (Save)

#### **Things to know**

These settings are applied only to the RS485 port.

The parameters are fixed and cannot be changed on the USB port.

### 3.2.23 Output status


To reset the output status after writing a configuration, follow this procedure:


Step	Action
------	--------

1 Click on 

2 To reset the Modbus data and keep the output status after a new configuration has been written, in the *Clear output options* enable


#### **Reset output status and Modbus data after configuration phase**

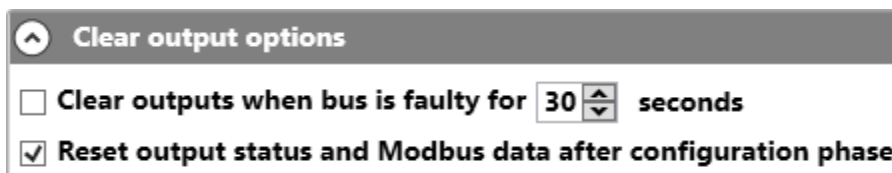

3 Click on  (Save)

### 3.2.24 Set the password

To set the password to read the configuration file or to read the configuration from the controller, follow this procedure:

Step	Action
1	Click on 
2	Enter and confirm the password <div data-bbox="408 568 1075 667" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <div style="background-color: #cccccc; padding: 2px 5px;"><b>Password</b></div> <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"><b>Enter value:</b></div> <div style="border: 1px solid #ccc; padding: 2px 20px; margin-right: 10px;">Enter password here...</div> <div style="border: 1px solid #ccc; padding: 2px 20px;">Confirm password here...</div> </div> </div>
3	<p>Check <b>Read configuration from file</b>, if the password has to protect the configuration file</p> <p>Check <b>Read configuration from SD2DUG24</b>, if the password has to protect the reading from the SD2DUG24</p> <div data-bbox="408 913 1075 1041" style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;"> <p><b>Ask password before:</b></p> <p><input type="checkbox"/> <b>Read configuration from file</b></p> <p><input type="checkbox"/> <b>Read configuration from controller</b></p> </div>

# 4 FORMULAS

## 4.1 Procedures

### 4.1.1 Link a formula to an analogue value

To apply a formula to an analogue signal, follow this procedure:



Step	Action
1	Select the channel or the group to which the formula has to be applied
2	Click on the formula




A small number will appear at the bottom right of the channel to indicate that a formula has been applied



#### Things to know

- The formula is applied to the raw data of the associated channels and the output will be available in the relevant Modbus address
- If the formula is a standard one, the small number indicating the formula is black and the background is the same colour of the tile containing the name of the channel 
- If the formula is a customised one, the small number indicating the formula is same colour as the tile containing the name of the channel and the background is black 
- If a channel with an associated formula is selected, the number indicating the formula will have a coloured background

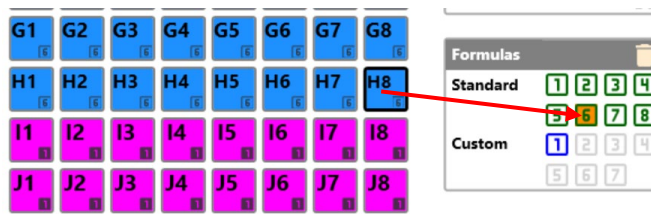

## 4.1.2 Formula standard

Number and name	Formula
1 – Lux type A (5 – 5000 lux)	$\text{Lux} = (10 (3 * \text{ANALINK}) / 255)) * 5$
2 – Lux type B (3000-300000 lux)	$\text{Lux} = (10 (2 * \text{ANALINK}) / 255)) * 3000$
3 – Wind speed	$\text{Speed [m/s]} = ((\text{ANALINK} * 25) / 255) + 5$
4 – Humidity 5-95%rH	$\text{Humidity [\%rH]} = ((\text{ANALINK} * 90) / 255) + 5$
5 – Temperature 10-35°	$\text{Temperature [}^{\circ}\text{C*10]} = ((\text{ANALINK} * 250) / 255) + 100$
6 – Temperature 0-50°	$\text{Temperature [}^{\circ}\text{C*10]} = ((\text{ANALINK} * 500) / 255)$
7 – G432111120	$\text{Lux} = (10 (3 * \text{ANALINK}) / 128)) * 0.1$
8 – BSI-TEMANA temperature	See table in Appendix

Temperatures in formulas 5 and 6 are calculated in tenths of degrees, in the Modbus map temperature values are shown in tenths of degrees as well.

### 4.1.3 Customised formula

To create a customised formula, follow this procedure:

Step	Action
------	--------

1 Click on 

2 Enable the formula to set and name it



3 Set the formula



Note: Click on  to change the formula type from linear <-> to exponential

4 Associate the formula to the relevant channel



# 5 MODBUS MAP

In the Modbus map, all the Modbus variables related to the Dupline channels set in the configuration are reported. The list of entries is automatically updated every time the configuration is changed. The variable types shown are *Holding registers*, *Input registers* and *Coils*.

The table below shows the description of the **Registers** parameters:

Table header	Description
<b>Register</b>	Describing the register type, such as HR (Holding register), IR (Input register)
	Showing the reading (RO) or writing (RW) permissions of any entry. There are two exceptions:
<b>R/W</b>	<b>RW*</b> The selected entry can be written, but the writing operations can be done by using a different register. <i>Tip: The remapped register is shown in the pop-up that appears by hovering over</i>
	<b>RW-</b> The selected entry can be written but some of its output bits are read-only. This is because a protocol is set. The writing operations can be done by using a different register. <i>Tip: The remapped register is shown in the pop-up that appears by hovering over with mouse</i>
<b>Read fx</b>	Showing the function codes available for reading/writing operation
<b>Write fx</b>	
<b>Address</b>	Showing the register address in decimal format
<b>Address (hex)</b>	Showing the register address in HEX format
<b>Num words</b>	Showing the number of words to be read / written for the register (length)



The table below shows the description of the **Coils** parameters:

Table header	Description
<b>R/W</b>	Showing if the register has reading only (RO) or Reading and writing (RW) permissions
<b>Read fx</b>	Showing the function codes available for reading/writing operation
<b>Write fx</b>	
<b>Address</b>	Showing the coil address in decimal format
<b>Address (hex)</b>	Showing the coil address in HEX format
<b>Description</b>	Showing the relevant Dupline channel address

## 5.1 Procedure














### 5.1.1 Access to the Modbus map

To access the Modbus map, follow this procedure:

Step	Action
1	Click on 
2	Click on  to update the Modbus map with the saved configuration
3	The Modbus map relevant to the programmed channel will be shown

### 5.1.2 Search entries in the Modbus map




The table header of the Modbus map has a search box with additional search tools. To do a search, follow the procedure below:

Step	Action						
1	Enter the search criteria in the box						
The search box can operate in two ways. The results will be as follows:							
<table border="1"> <thead> <tr> <th>Option</th> <th>Behaviour</th> </tr> </thead> <tbody> <tr> <td>             Filter / Highlight toggle icon         </td> <td> <ul style="list-style-type: none"> <li>When  is selected, <b>ONLY</b> the results that satisfy the search criteria will be shown.</li> <li>When  is selected, the results that satisfy the search criteria will be highlighted in yellow colour, but any filter is applied;</li> </ul> </td> </tr> <tr> <td>             Case insensitive/sensitive         </td> <td>The search operations can include case-sensitive matching or not;</td> </tr> </tbody> </table>		Option	Behaviour	 Filter / Highlight toggle icon	<ul style="list-style-type: none"> <li>When  is selected, <b>ONLY</b> the results that satisfy the search criteria will be shown.</li> <li>When  is selected, the results that satisfy the search criteria will be highlighted in yellow colour, but any filter is applied;</li> </ul>	 Case insensitive/sensitive	The search operations can include case-sensitive matching or not;
Option	Behaviour						
 Filter / Highlight toggle icon	<ul style="list-style-type: none"> <li>When  is selected, <b>ONLY</b> the results that satisfy the search criteria will be shown.</li> <li>When  is selected, the results that satisfy the search criteria will be highlighted in yellow colour, but any filter is applied;</li> </ul>						
 Case insensitive/sensitive	The search operations can include case-sensitive matching or not;						
3	To clear the search results, click on 						



### 5.1.3 Export the Modbus map





The Modbus map can be exported in *PDF* or in *XLSX* format. To generate the file, follow this procedure:

Step	Action
1	Click on 
2	In the <i>Export settings</i> panel, select the entries type to be exported: <ul style="list-style-type: none"> <li>▪ Check the <b>Print register entries</b> to export all the <i>Modbus registers</i></li> <li>▪ Check the <b>Print coil entries</b> to export all the <i>Modbus coils</i></li> </ul>
3	<i>Optional:</i> Fill-in the <i>Title</i> , <i>Subject</i> and <i>Author</i> fields
4	a) Click on  to export the Modbus map in <i>PDF</i> format b) Click on  to export the Modbus map in <i>XLSX</i> format

**Note:** The map can be exported only if live data are not active

### 5.1.4 Enable Live data







To check the activity of the Dupline bus, follow this procedure:

Step	Action
1	Click on 
2	In the bottom part of the Modbus map panel, click on  <b>Thing to know</b> When live data is active, the icons will turn in light grey colour
3	When live data are active, the <b>Coils</b> will split into two groups: <ul style="list-style-type: none"> <li>▪ <b>Input channels status</b></li> <li>▪ <b>Output channels status</b></li> </ul> The active Input and Output channels are red-coloured, as shown in the example below: <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div data-bbox="352 1778 823 1899">  </div> <div data-bbox="852 1778 1318 1899">  </div> </div>

**Note:** In the *Live values* panel, it can be set the refresh rate (expressed in seconds)
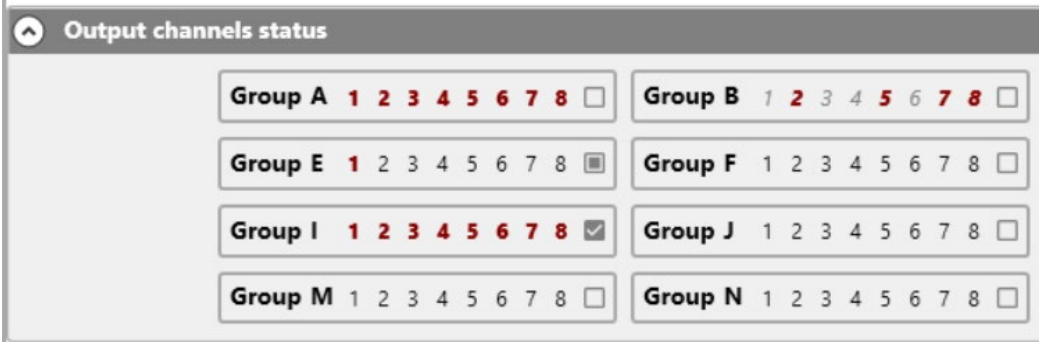
## 5.1.5 Change the output channels status

To change the output channels status, follow this procedure:

Step	Action
1	Enable the <b>Live data</b>
2	Open the <b>Output channels status</b>
	
3	<p>a) Every channel can be individually activated by clicking on it: it will turn in red</p> <p><u>or</u>:</p> <p>b) By clicking on the small square () at the end of each group, the status of all the 8 channels will be as follows:</p> <ul style="list-style-type: none"> <li>- First click: all the channels are activated </li> <li>- Second click: all the channels are deactivated </li> <li>- Third click: all the channels are set back to  (the status they had before the first click)</li> </ul>
4	Click again on  to exit the <b>Live data</b> .

# 6 XML DRIVER PANEL

**Note: all settings made in this section are saved only in the software configuration and not in the SD2DUG24 memory. The configuration file must be saved and it can be used as further reference. Reading the configuration from the SD2DUG will not import these settings.**

The XML driver can be used to export the Modbus map as an XML driver that will be imported in the UWP 3.0 configuration software. Please refer to the UWP 3.0 tool manual.

Clicking on the , the following panel will appear:

**A** — Properties

Name: SD2DUG24

**B** — Em24 Variables

Published	Em24 Name	Channels	Address	Publsh mode	Quantity	Subtype	Vir label	Range
<input type="checkbox"/>	Em24	01-18	0	RTA	-	-	-	-

**Analog Variables**

Published	Vir Name	Channels	Channels type	Max value	Publsh mode	Measure unit
<input checked="" type="checkbox"/>	Analog Input A1	A1	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input A2	A2	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input A3	A3	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input A4	A4	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input A5	A5	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input A6	A6	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input A7	A7	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input A8	A8	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input B1	B1	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input B2	B2	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input B3	B3	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input B4	B4	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input B5	B5	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input B6	B6	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input B7	B7	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input B8	B8	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input C1	C1	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input C2	C2	Input		RTA	
<input checked="" type="checkbox"/>	Analog Input C3	C3	Input		RTA	

**C** — XML export button

The different areas are as follows:

Area	Description														
<b>A</b>	<p><b>Properties</b></p> <p>Set the driver <i>Name</i></p>														
<b>B</b>	<p>The Modbus variables are sorted by type. Click on the variable type to see the procedure that describes how to publish the variables:</p> <table border="1"> <thead> <tr> <th>Variable type</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><a href="#">EM24 Variables</a></td> <td> <p>Showing the EM24 variables related to the protocols:</p> <ul style="list-style-type: none"> <li>EM24 analogue data</li> <li>EM24 counters</li> </ul> </td> </tr> <tr> <td><a href="#">Analog Variables</a></td> <td> <p>Showing the analogue variables related to the protocols:</p> <ul style="list-style-type: none"> <li>Analink</li> <li>BCD</li> <li>8 bit</li> </ul> </td> </tr> <tr> <td><a href="#">Realtime word inputs</a></td> <td> <p>Showing the <i>input/output channels</i> where the channels are grouped in Word format.</p> </td> </tr> <tr> <td><a href="#">Realtime word outputs</a></td> <td> <p><i>All the word entries are selected by default.</i></p> </td> </tr> <tr> <td><a href="#">Realtime bit inputs</a></td> <td> <p>Showing the <i>input/output channels</i> where the channels are exported in bit format.</p> </td> </tr> <tr> <td><a href="#">Realtime bit outputs</a></td> <td></td> </tr> </tbody> </table>	Variable type	Description	<a href="#">EM24 Variables</a>	<p>Showing the EM24 variables related to the protocols:</p> <ul style="list-style-type: none"> <li>EM24 analogue data</li> <li>EM24 counters</li> </ul>	<a href="#">Analog Variables</a>	<p>Showing the analogue variables related to the protocols:</p> <ul style="list-style-type: none"> <li>Analink</li> <li>BCD</li> <li>8 bit</li> </ul>	<a href="#">Realtime word inputs</a>	<p>Showing the <i>input/output channels</i> where the channels are grouped in Word format.</p>	<a href="#">Realtime word outputs</a>	<p><i>All the word entries are selected by default.</i></p>	<a href="#">Realtime bit inputs</a>	<p>Showing the <i>input/output channels</i> where the channels are exported in bit format.</p>	<a href="#">Realtime bit outputs</a>	
Variable type	Description														
<a href="#">EM24 Variables</a>	<p>Showing the EM24 variables related to the protocols:</p> <ul style="list-style-type: none"> <li>EM24 analogue data</li> <li>EM24 counters</li> </ul>														
<a href="#">Analog Variables</a>	<p>Showing the analogue variables related to the protocols:</p> <ul style="list-style-type: none"> <li>Analink</li> <li>BCD</li> <li>8 bit</li> </ul>														
<a href="#">Realtime word inputs</a>	<p>Showing the <i>input/output channels</i> where the channels are grouped in Word format.</p>														
<a href="#">Realtime word outputs</a>	<p><i>All the word entries are selected by default.</i></p>														
<a href="#">Realtime bit inputs</a>	<p>Showing the <i>input/output channels</i> where the channels are exported in bit format.</p>														
<a href="#">Realtime bit outputs</a>															
<b>C</b>	<p>Generate the XML driver for the current configuration.</p> <p>Depending on the case, you have two options:</p> <ul style="list-style-type: none"> <li>Generate a new Driver by assigning a new random GUID*</li> <li>Select an existing Driver from a list to overwrite it. In this case, the new Driver will keep the same GUID and will increase it by 0.1.</li> </ul> <p><i>*Note: The GUID is a unique identifier number that is used by the UWP to recognize the driver versions, even if they have the same name.</i></p>														

## 6.1 Things to know

The variable configuration depends on the applied protocol and the list is automatically updated every time a change is made.

**Before exporting the XML file, the variables must be configured correctly and published.**




**Refer to the relevant procedures below that describe how to publish them.**

## 6.2 Procedures

### 6.2.1 Publish EM24 Analog data

**Important note:** The EM24 analogue data and counter variables have to be set manually in the XML driver panel. The fields must be compiled according to the information on the EM24 display. Please refer to the EM24 Dupline documentation.

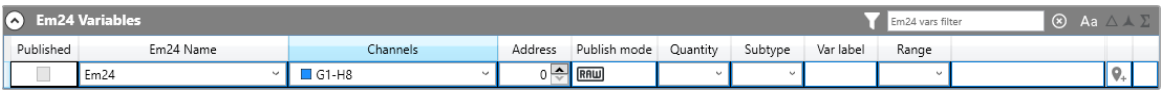To publish the *EM24 analogue data* variables in the XML driver, follow this procedure:

Step	Action
1	<p>If at least 1 analogue data value is present in the current configuration, a row is shown in the <i>EM24 Variables</i> (see below):</p> 
2	Enter the custom name in the <b>EM24 Name</b> field; otherwise, it will be entered the default name.
3	The <b>Channels</b> field shows the channels range that is used to read the analogue variables group.
4	<p>In the <b>Address</b> field, enter the multiplexer address for the selected analogue variable, as displayed in the EM24 device.</p> <p><i>Note: If more than one EM24 Dupline devices is present in the configuration, <u>refer to the table to set the Address properly.</u></i></p>
	<p><b>Publish mode</b></p> <p>Depending on the protocol settings, the variable can be exported in the XML format in two ways:</p>
5	<ol style="list-style-type: none"> <li>Select <input checked="" type="checkbox"/> <b>RAW</b> to publish the raw value;</li> <li>Select <input type="checkbox"/>  to publish the scaled value. The second option is automatically proposed whenever a formula is applied to the variable;</li> </ol> <p><i>Note: if both options are selected, both values will be exported in the XML driver file.</i></p>
6	In the <b>Quantity</b> field, select the measure unit value according to what is set in the EM24 device.
7	<p>In the <b>Subtype</b> field, set the subtype value according to what is set in the EM24 device.</p> <p><i>Note: the variables such as <b>Ph</b> and <b>Hz</b> do not require this parameter.</i></p>
8	<p>In the <b>Range</b> field, set the range value according to what is set in the EM24 device.</p> <p><i>Note: the variables such as <b>Ph</b> and <b>Hz</b> do not require this parameter.</i></p>
9	<p>By clicking on , a new row will be added.</p> <p><i>Note: The new row is created with the same properties of the first one.</i></p>

**Note:** The **published flag** will be selectable only if all the parameters are set correctly. Once a variable is published, it can be selected/deselected by using the check option.

## 6.2.2 Publish EM24 counter variables


To publish the *EM24 counter* variables in the XML driver, follow this procedure:

Step	Action																				
1	<p>If at least 1 counter value is present in the current configuration, a row is shown in the <i>EM24 Variables</i> (see below):</p> <table border="1"> <thead> <tr> <th>Published</th> <th>Em24 Name</th> <th>Channels</th> <th>Address</th> <th>Publish mode</th> <th>Quantity</th> <th>Subtype</th> <th>Var label</th> <th>Range</th> <th></th> </tr> </thead> <tbody> <tr> <td><input type="checkbox"/></td> <td>Em24</td> <td>C1-F8</td> <td>0</td> <td><input type="checkbox"/> <input checked="" type="checkbox"/></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Published	Em24 Name	Channels	Address	Publish mode	Quantity	Subtype	Var label	Range		<input type="checkbox"/>	Em24	C1-F8	0	<input type="checkbox"/> <input checked="" type="checkbox"/>					
Published	Em24 Name	Channels	Address	Publish mode	Quantity	Subtype	Var label	Range													
<input type="checkbox"/>	Em24	C1-F8	0	<input type="checkbox"/> <input checked="" type="checkbox"/>																	
2	Enter the custom name in the <b>EM24 Name</b> field; otherwise, it will be entered the default name.																				
3	The <b>Channels</b> field shows the channels range that is used to read the counters group.																				
4	<p>In the <b>Address</b> field, enter the multiplexer address for the selected counter according to what is displayed in the EM24 device.</p> <p><i>Note: If more than one EM24 Dupline device is present in the configuration, <a href="#">refer to the table to set the Address properly</a>.</i></p>																				
<p><b>Publish mode</b></p> <p>Depending on the protocol settings, the variable can be exported in the XML format in two ways:</p>																					
5	<ol style="list-style-type: none"> <li>Select <input checked="" type="checkbox"/> <b>RAW</b> to publish the raw value;</li> <li>Select <input checked="" type="checkbox"/> <b>fx</b> to publish the scaled value. The second option is automatically proposed whenever a formula is applied to the variable;</li> </ol> <p><i>Note: if both options are selected, both values will be exported in the XML driver file.</i></p>																				
6	In the <b>Quantity</b> field, select the counter type according to what is set in the EM24 device.																				
7	In the <b>Subtype</b> field set the subtype value according to what is set in the EM24 device.																				
8	For all the counter variables, the <b>Range</b> field is not required.																				
9	<p>By clicking on  , a new row will be added.</p> <p><i>Note: The new row is created with the same properties of the first one.</i></p>																				

**Note:** The **published flag** will be selectable only if all the parameters are set correctly. Once a variable is published, it can be selected/deselected by using the check option.

## 6.2.3 Publish Analog Variables




Follow the procedure below to configure and publish the Analogue Variables that have to be exported in the XML Driver:

Step	Action
1	The <b>Var Name</b> field shows the Protocol and the Dupline channels used for the selected variable. The text can be changed by entering the new value.
2	The <b>Channels</b> field shows the Dupline channels reference. <i>Note: the value cannot be changed.</i>
3	The <b>Channels Type</b> field shows the type of the selected variables, such as Input or Output. <i>Note: the value cannot be changed.</i>
4	<b>Mux value</b> (Only for multiplexed protocol) In the numeric field, select the Multiplexer address that is used to read the selected variables.
<p><b>Publish mode</b></p> <p>Depending on the protocol settings, the variable can be exported in the XML format in two ways:</p>	
5	<ol style="list-style-type: none"> <li>1. Select <input type="checkbox"/> <b>RAW</b> to publish the raw value;</li> <li>2. Select <input type="checkbox"/> <b>f<sub>x</sub></b> to publish the scaled value. The second option is automatically proposed whenever a formula is applied to the variable;</li> </ol> <p><i>Note: if both options are selected, both values will be exported in the XML driver file.</i></p>
6	In the <b>Measure unit</b> enter the value for the selected variables. <i>Note: The list does not contain any predefined values.</i>
7	By clicking on  , a new row will be added. <i>Note: The new row is created with the same properties of the first one.</i>

**Note:** The **published flag** will be selectable only if all the parameters are set correctly. Once a variable is published, it can be selected/deselected by using the check option.

## 6.2.4 Publish Realtime word inputs / outputs

To publish the Realtime word input or Realtime word outputs values that have to be exported in the XML Driver, follow the procedure below:

Step	Action
1	<p>In the XML Driver panel, click on the Realtime word inputs/ Realtime word outputs to see the entries:</p> 
2	<p>Enter the custom name in the <b>Group X-Y</b> name field; otherwise, it will be entered the default value.</p>
3	<p>By clicking on the small square (  ) at the end of each group, all the variables belonging to the group will be published. The icon changes as shown in the example below:</p> 




## 6.2.5 Publish Realtime bit inputs/outputs

To publish the Realtime bit input or Realtime bit outputs values that have to be exported in the XML Driver, follow the procedure below:

Step	Action
------	--------


- 1 In the XML Driver panel, click on the Realtime bit inputs/ Realtime bit outputs to see the entries:

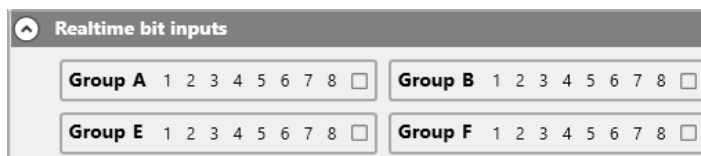
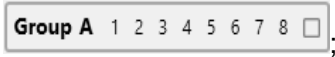


- 2 a) Every channel can be individually published by clicking on it: it will turn in red. In the example below, the channels 2, 5, 7 are selected manually,



or;


- b) By clicking on the small square () at the end of each group, all the 8 channels will be as follows:

- First click: all the channels are published ;
- Second click: all the channels are deselected ;
- Third click: all the channels are set back to the status they had before the first click



## 6.2.6 Generating the XML driver

Once all the required variables have been added (see the procedures above), to generate the driver file in XML format please refer to the following procedure:

Step	Action
1	In the <b>Name</b> field, enter the driver name; otherwise, it will be used the <i>configuration file name</i> .
	<p>Click on  to create the XML file.</p>
2	<p><i>Notes:</i></p> <ul style="list-style-type: none"> <li>• <i>Depending on the case, you can generate a new Driver by assigning a new random GUID; or select an existing Driver from a list to overwrite it. In this case, the new Driver will keep the same GUID and will increase it by 0.1.</i></li> <li>• <i>The GUID is a unique identifier number that is used by the UWP to recognize the driver versions, even if they have the same name.</i></li> </ul>


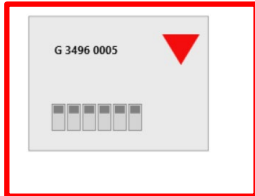
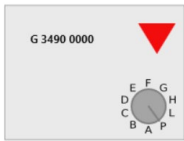

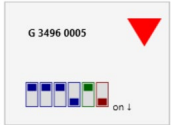






**Note:** to import the XML Driver file, refer to the UWP user manual (the Modbus commander paragraph)

# 7 G34960005 OR G34900000 QUICK SUBSTITUTION

## 7.1 Procedures





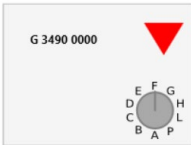






### 7.1.1 Substitute a G34960005

To easily and quickly copy the settings of a G34960005 to be substitute by an SD2DUG24, follow this procedure:

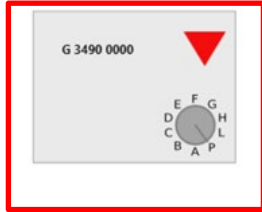Step	Action
1	Click on 
2	Select the device by clicking on the relevant icon: <div data-bbox="443 801 1094 1211" style="border: 1px solid gray; padding: 10px; text-align: center;"> <p><b>Copy configuration from old device</b></p> <p>Please select the device you want to copy</p> <div style="display: flex; justify-content: space-around;"> <div style="border: 2px solid red; padding: 5px;">  </div> <div>  </div> </div> <p></p> </div>
3	Set the “virtual” dip-switches, copying the ones of the G34960005 <div data-bbox="443 1294 1043 1666" style="border: 1px solid gray; padding: 10px; text-align: center;"> <p><b>Copy configuration from old device</b></p> <p>Please click on the dip switches and set them as they are in your device</p> <div style="text-align: center;">  </div> <p> <span style="color: blue;">●</span> Modbus address: 1              <span style="color: green;">●</span> Number of channels: 128              <span style="color: red;">●</span> Maintain outputs when bus is faulty         </p> <p>    </p> </div>
4	Click on  (done) and then, on the pop-up that will appear, click on  (save)
5	Click on  to write the configuration into the SD2DUG24

## 7.1.2 Substitute a G34900000

To easily and quickly copy the settings of a G34900000 to be substituted by an SD2DUG24, follow this procedure:



Step	Action
1	Click on 
2	Select the device by clicking on the relevant icon: <div data-bbox="442 539 1177 996" style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;"> <p style="text-align: center;"><b>Copy configuration from old device</b></p> <p style="text-align: center;">Please select the device you want to copy</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;"> <p>G 3496 0005</p>  </div> <div style="border: 2px solid red; padding: 5px; text-align: center;"> <p>G 3490 0000</p>  </div> </div> <p style="text-align: center;"></p> </div>
3	Set the “virtual” rotary switch, copying that of the G34900000 <div data-bbox="456 1135 1145 1563" style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;"> <p style="text-align: center;"><b>Copy configuration from old device</b></p> <p style="text-align: center;">Please move the mouse wheel or click on the rotary switch to select the same letter as in your device</p> <div style="text-align: center;">  </div> <p style="text-align: center;">Number of channels: 48</p> <p style="text-align: center;">    </p> </div>
4	Click on  (done) and then, on the pop-up that will appear, click on  (save)
5	Click on  to write the configuration into the SD2DUG24

# 8 APENDIX

## 8.1 Tips and tricks

### 8.1.1 Select multiple channels

To easily and quickly select multiple channels that are not consecutive, use the drag and drop, following this procedure:

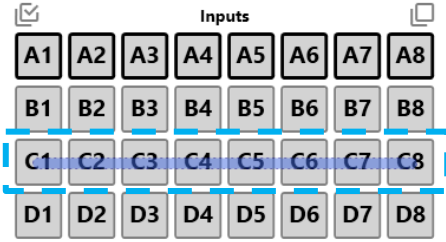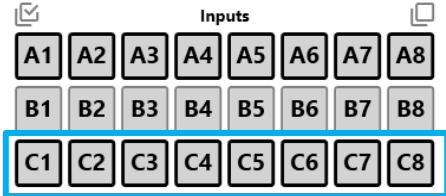Step	Action
1	Hold down the <b>Ctrl</b> key
2	Hold down the left mouse button
3	With the left mouse button held down, move the pointer over the channels that have to be selected
	 <p>The diagram shows a grid of 32 channels arranged in 4 rows and 8 columns. The rows are labeled A1-A8, B1-B8, C1-C8, and D1-D8. A blue selection box is drawn around the C1-C8 row, indicating that these channels are selected. The word 'Inputs' is centered above the grid. There are small icons in the top-left and top-right corners of the grid area.</p>
4	Release the left mouse button to complete the selection
	 <p>The diagram shows the same grid of 32 channels. The C1-C8 row is now highlighted with a solid blue border, indicating that the selection is complete.</p>
5	Repeat the steps above to select other channels
<p><b>TIP:</b> By using the <b>Alt</b> key instead of the <b>Ctrl</b> key, the channels can be deselected</p>	

## 8.2 BSI-TEMANA conversion table

Analink	Temp. (°C)	Analink	Temp. (°C)	Analink	Temp. (°C)	Analink	Temp. (°C)	Analink	Temp. (°C)
0	-30	52	-11,6	104	6,7	156	24,7	208	43,4
1	-30	53	-11,2	105	7	157	25,4	209	43,7
2	-29,6	54	-10,9	106	7,4	158	25,7	211	44,4
3	-29,5	55	-10,5	107	7,7	159	26,1	212	44,4
4	-28,9	56	-10,2	108	8,1	160	26,4	213	45,1
5	-28,5	57	-9,8	109	8,4	161	26,8	214	45,5
6	-28,2	58	-9,5	110	8,8	162	27,1	215	45,8
7	-27,5	59	-9,1	111	9,1	163	27,5	216	46,2
8	-27,1	60	-8,8	112	9,5	164	27,8	217	46,6
9	-26,8	61	-8,4	113	9,8	165	28,2	218	46,9
10	-26,4	62	-8,1	114	10,2	166	28,2	219	47,3
11	-26,1	63	-7,7	115	10,5	167	28,5	220	47,6
12	-25,7	64	-7,4	116	10,9	168	29,3	221	48
13	-25,4	65	-7	117	11,3	169	29,6	222	48,3
14	-25	66	-6,7	118	11,6	170	30	223	48,3
15	-24,7	67	-6,3	119	12	171	30,3	224	48,7
16	-24,3	68	-5,9	120	12,3	172	30,3	225	49,4
17	-23,9	69	-5,6	121	12,7	173	30,7	226	49,7
18	-23,6	70	-5,2	122	13	174	31	227	50,1
19	-23,2	71	-4,9	123	13,4	175	31,4	228	50,4
20	-22,9	72	-4,5	124	13,7	176	32,1	229	50,8
21	-22,5	73	-4,2	125	14,1	177	32,4	230	51,1
22	-22,2	74	-3,8	126	14,4	178	32,8	231	51,5
23	-21,8	75	-3,5	127	14,8	179	33,1	232	51,8
24	-21,5	76	-3,1	128	15,1	180	33,5	233	52,2
25	-21,1	77	-2,8	129	15,5	181	33,8	234	52,6
26	-20,8	78	-2,4	130	15,8	182	33,1	235	52,9
27	-20,4	79	-2,1	131	16,2	183	34,2	236	53,3
28	-20,1	80	-1,7	132	16,5	184	34,5	237	53,6
29	-19,7	81	-1,4	133	16,9	185	35,3	238	53,6
30	-19,4	82	-1	134	17,3	186	35,6	239	54,3
31	-19	83	-0,7	135	17,6	187	36	240	54,7
32	-18,7	84	-0,3	136	18	188	36,3	241	55
33	-18,3	85	0	137	18,3	189	36,7	242	55,4
34	-17,9	86	0,3	138	18,7	190	37,4	243	55,7
35	-17,6	87	0,7	139	19	191	37,4	244	56,1
36	-17,2	88	1	140	19,4	192	37,7	245	56,4
37	-16,9	89	1,4	141	19,7	193	38,1	247	57,1
38	-16,5	90	1,7	142	20,1	194	38,4	248	57,5
39	-16,2	91	2,1	143	20,4	195	38,8	249	57,8
40	-15,8	92	2,4	144	20,8	196	38,8	250	58,2
41	-15,5	93	2,8	145	21,1	197	39,1	251	58,6
42	-15,1	94	3,1	146	21,5	198	39,8	252	58,9
43	-14,8	95	3,5	147	21,8	199	40,2	253	59,3
44	-14,4	96	3,8	148	22,2	200	40,6	254	59,6
45	-14,1	97	4,2	149	22,5	201	40,9	255	60
46	-13,7	98	4,5	150	22,9	202	40,9		
47	-13,4	99	4,9	151	23,3	203	41,3		
48	-13	100	5,2	152	23,6	204	42		
49	-12,7	101	5,6	153	24	205	42,3		
50	-12,3	102	6	154	24,3	206	42,7		
51	-11,9	103	6,3	155	24,7	207	43		

## 8.3 EM24 analog variables table

In case more than one EM24 Dupline device is present in a configuration, consider the numbers in the following table in order to publish the EM24 variables:

EM24 Dupline		Dupline Groups				
		G-H	I-J	K-L	M-N	O-P
Multiplexer Index	0	0	16	32	48	64
	1	1	17	33	49	65
	2	2	18	34	50	66
	3	3	19	35	51	67
	4	4	20	36	52	68
	5	5	21	37	53	69
	6	6	22	38	54	70
	7	7	23	39	55	71
	8	8	24	40	56	72
	9	9	25	41	57	73
	10	10	26	42	58	74
	11	11	27	43	59	75
	12	12	28	44	60	76
	13	13	29	45	61	77
	14	14	30	46	62	78
	15	15	31	47	63	79